



TOUR PACK RELOCATOR KIT

1527

FITS: '98-'04 H-D TOURING MODELS WITH H-D TOUR PACK

PART#	INCLUDED
601527	1 Tour Pack Relocator Bar
401527SC	2 Bar Support – Chrome
201124	5 5/16"–18 X 2-1/4" Button Head Cap Screw
200295	7 5/16"–18 Chrome Nylock Nut
200281	7 5/16" Chrome Flat Washer
201125	2 5/16"–18 X 7/8" Button Head Cap Screw
201126	2 5/16"–18 X 3/4" Ribbed Neck Bolt
301527	1 Instruction Sheet

TOOLS SUGGESTED

Set of Standard combination wrenches, Set of Standard Allen wrenches

PROCEDURE

- STEP 1** Remove the Seat and the saddle bags. Set them aside.
- STEP 2** Open the tour pack and remove the rubber mat in the bottom. Disconnect the radio antenna wire and any other wires. Remove the rubber grommet at the wire inlet hole allowing you to pull all of the wires free from the tour pack.
- STEP 3** Remove the button head cap screws that hold the tour pack to the tour pack support bar. Remove the tour pack and set it aside.
- STEP 4** Remove the fasteners that hold the license plate bracket to the support bar.
- STEP 6** Remove the two hex head mounting bolts at the front of the tour pack support bar. Lift the support bar out, up and away from your fender being careful not to scratch the paint on your fender.
- STEP 7** Install the new longer support bar in the same fashion as the old one was removed using the two stock hex head mounting bolts. See FIG.1 for proper mounting.
- STEP 8** Slide the two short support bars under the tour pack support bar on each side so that the slotted holes line up with the holes in the tour pack support bar. The center counter sunk hole should be lined up with the license plate bracket holes. If the center counter sunk holes do not line up with the license plate bracket holes then you must turn them around. Push a Ribbed Neck Bolt through the holes in the top of the license plate bracket and fasten them using a supplied Chrome Nylock Nut to each bolt and tighten.
- STEP 9** Place the tour pack on the support bar. Bolt the tour pack down using the five supplied 5/16"–18 X 2-1/4" Button Head Cap Screws and 5/16"–18 Chrome Nylock Nuts and tighten.

-cont.-

E-MAIL

techsupport@kuryakyn.com or call 715.247.2983

WARRANTY

Kuryakyn™ warrants that any Kuryakyn product sold hereunder, if properly installed, maintained and operated under normal conditions, shall be free from any defects in materials and workmanship for a period of one (1) year from the date the Kuryakyn products are sold to the customer.


CONSEQUENTIAL DAMAGES: Kuryakyn shall not be liable for any consequential or incidental damages.

ABOUT OUR CATALOG

You'll find all our innovations for H-D, GL and Metric Cruisers in our annual catalogs. Order online today—select the "CATALOGS" icon. Each Kuryakyn™ product comes with a Proof-of-Purchase good for a complimentary catalog. Details in packaging.

Be sure to ask your local dealer about other Kuryakyn products, the motorcycle parts and accessories designed for riders by riders.

©2003 Kuryakyn USA™ All Rights reserved.

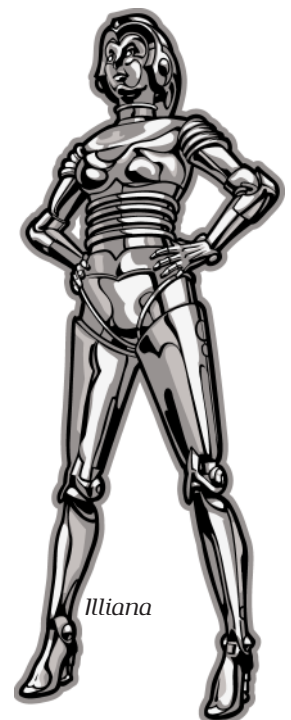


Illiana

STEP 10 Reroute and reconnect the radio antenna wire and any other wires. Replace the rubber grommet and rubber mat.

Kuryakyn™

STEP 11 Put the seat and saddle bags back on.

Ride On!

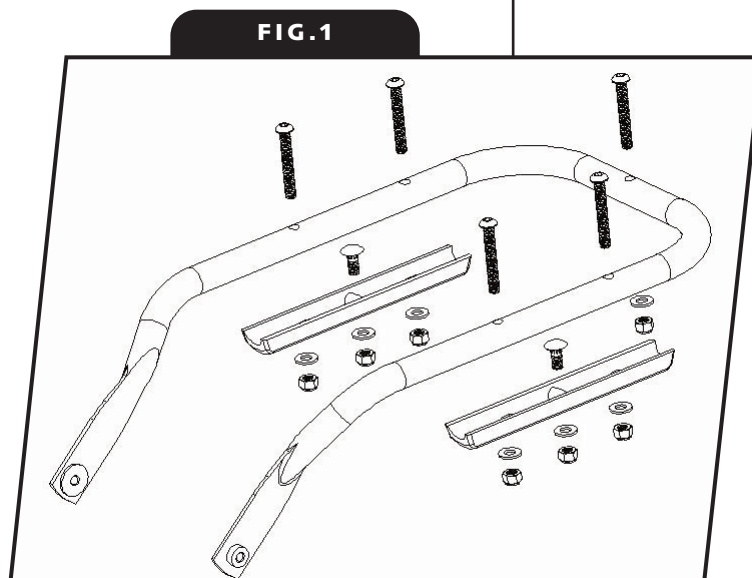

PAGE

2